

Korenix JetNet Series Industrial Modbus TCP Function

User Manual

Version 1.0

Nov. 2011

korenix

www.korenix.com

1. Introduction to Modbus TCP

1.1 Overview


The Modbus is the most popular industrial protocol being used today. Modbus is a “master-slave” architecture, where the “master” sends polling request with address and data it wants to one of multiple “slaves”. The slave device that is addressed responds to master. The master is often a PC, PLC, DCS or RTU... The slaves are often the field devices. Some of them are “hybrid”.

There are three most common Modbus versions, Modbus ASCII, Modbus RTU and Modbus TCP. Ethernet based device, Industrial Ethernet Switch for example, supports Modbus TCP that it can be polled through Ethernet. Thus the Modbus TCP master can read or write the Modbus registers provided by the Industrial Ethernet Switch.

Korenix JetNet switches implement the Modbus TCP registers into the latest firmware. The registers include the System information, firmware information, IP address, power status, interfaces’ status, port information, SFP information, inbound/outbound packet information.

With the supported registers, users can read the information through their own Modbus TCP based progress/ display/ monitor applications and monitor the status of the switch easily.

There is no Web UI for Modbus TCP configuration. The Modbus TCP configuration can be changed through CLI.

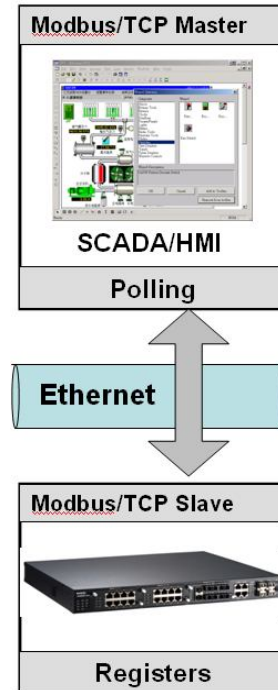

1.2 Function Code (FC)

The Modbus TCP device uses a subset of the standard Modbus TCP function code to access device-dependent information. Modbus TCP function code is defined as below.

FC	Name	Usage
01	Read Coils	Read the state of a digital output
02	Read Input Status	Read the state of a digital input
03	Read Holding Register	Read holding register in 16-bits register format
04	Read Input Registers	Read data in 16-bits register format
05	Write Coil	Write data to force a digital output ON/OFF
06	Write Single Register	Write data in 16-bits register format
15	Force Multiple Coils	Write data to force multiple consecutive coils

The JetNet device supports the function code 04, which name is Read Input Registers. With this support, the remote SCADA or other Modbus TCP application can poll the information of the device and monitor the major status of the switch.

1.3 Error Checking

The utilization of the error checking will help eliminate errors caused by noise in the communication link. In Modbus TCP mode, messages include an error-checking field that is based on a Cyclical Redundancy Check (CRC) method. The CRC field checks the contents of the entire message. It applied regardless of any parity check method used for the individual BYTE actors of the message. The CRC value is calculated by the transmitting device, which appends the CRC to the message. The receiving device recalculates a CRC during receipt of the message, and compares the calculated value to the actual value it received in the CRC field.

Exception Response

If an error occurs, the slave sends an exception response message to master consisting of the slave address, function code, exception response code and error check field. In an exception response, the slave sets the high-order bit (MSB) of the response function code to one. The exception response codes are listed below.

Code	Name	Descriptions
01	Illegal Function	The message function received is not allowable action.
02	Illegal Data Address	The address referenced in the data field is not valid.
03	Illegal Data Value	The value referenced at the addressed device location is no within range.
04	Slave Device Failure	An unrecoverable error occurred while the slave was attempting to perform the requested action.
05	Acknowledge	The slave has accepted the request and processing it, but a long duration of time will be required to do so.
06	Slave Device Busy	The slave is engaged in processing a long-duration program command.
07	Negative Acknowledge	The slave cannot perform the program function received in the query.
08	Memory Parity Error	The slave attempted to read extended memory, but detected a parity error in the memory.

2. Modbus TCP Register Table

Word Address	Data Type	Description
System Information		
0x0000	16 words	Vender Name = "Korenix" Word 0 Hi byte = 'K' Word 0 Lo byte = 'o' Word 1 Hi byte = 'r' Word 1 Lo byte = 'e'

		Word 2 Hi byte = 'n' Word 2 Lo byte = 'l' Word 2 Hi byte = 'x' Word 2 Lo byte = '\0' (other words = 0)
0x0010	16 words	Product Name = "JetNet5828G" Word 0 Hi byte = 'J' Word 0 Lo byte = 'e' Word 1 Hi byte = 'T' Word 1 Lo byte = 'N' Word 2 Hi byte = 'e' Word 2 Lo byte = 't' Word 3 Hi byte = '5' Word 3 Lo byte = '8' Word 4 Lo byte = '2' Word 4 Hi byte = '8' Word 5 Lo byte = 'G' Word 5 Hi byte = '\0' (other words = 0)
0x0020	128 words	SNMP system name (string)
0x00A0	128 words	SNMP system location (string)
0x0120	128 words	SNMP system contact (string)
0x01A0	32 words	SNMP system OID (string)
0x01C0	2 words	System uptime (unsigned long)
0x01C2 to 0x01FF	60 words	Reserved address space
0x0200	2 words	hardware version
0x0202	2 words	S/N information
0x0204	2 words	CPLD version
0x0206	2 words	Boot loader version
0x0208	2 words	Firmware Version Word 0 Hi byte = first number of version Word 0 Lo byte = second number of version Word 1 Hi byte = third number of version Word 1 Lo byte = extended character of version Ex: Version = v1.2a Word 0 Hi byte = 0x1 Word 0 Lo byte = 0x2

		Word 1 Hi byte = 0x0 Word 1 Lo byte = 'a' Version = v1.2.3a Word 0 Hi byte = 0x1 Word 0 Lo byte = 0x2 Word 1 Hi byte = 0x3 Word 1 Lo byte = 'a' Version = v1.2.3.4 Word 0 Hi byte = 0x1 Word 0 Lo byte = 0x2 Word 1 Hi byte = 0x3 Word 1 Lo byte = 0x0
0x020A	2 words	Firmware Release Date Firmware was released on 2010-08-11 at 09 o'clock Word 0 = 0x0B09 Word 1 = 0x0A08
0x020C	3 words	Ethernet MAC Address Ex: MAC = 01-02-03-04-05-06 Word 0 Hi byte = 0x01 Word 0 Lo byte = 0x02 Word 1 Hi byte = 0x03 Word 1 Lo byte = 0x04 Word 2 Hi byte = 0x05 Word 2 Lo byte = 0x06
0x020F to 0x2FF	241 words	Reserved address space
0x0300	2 words	IP address Ex: IP = 192.168.10.1 Word 0 Hi byte = 0xC0 Word 0 Lo byte = 0xA8 Word 1 Hi byte = 0x0A Word 1 Lo byte = 0x01
0x0302	2 words	Subnet Mask
0x0304	2 words	Default Gateway
0x0306	2 words	DNS Server
0x0308 to 0x3FF	248 words	Reserved address space (IPv6 or others)
0x0400	1 word	AC1 0x0000:Off 0x0001:On

		0xFFFF: unavailable
0x0401	1 word	AC2 0x0000:Off 0x0001:On 0xFFFF: unavailable
0x0402	1 word	DC1 0x0000:Off 0x0001:On 0xFFFF: unavailable
0x0403	1 word	DC2 0x0000:Off 0x0001:On 0xFFFF: unavailable
0x0404 to 0x040F	12 words	Reserved address space
0x0410	1 word	DI1 0x0000:Off 0x0001:On 0xFFFF: unavailable
0x0411	1 word	DI2 0x0000:Off 0x0001:On 0xFFFF: unavailable
0x0412	1 word	DO1 0x0000:Off 0x0001:On 0xFFFF: unavailable
0x0413	1 word	DO2 0x0000:Off 0x0001:On 0xFFFF: unavailable
0x0414 to 0x041F	12 words	Reserved address space
0x0420	1 word	RDY 0x0000:Off 0x0001:On
0x0421	1 word	RM / RS (Green light) 0x0000:Off

		0x0001:On
0x0422	1 word	RF / RS – (Yellow light) 0x0000:Off 0x0001:On
0x0423	1 word	RS
Port Information (32 Ports)		
0x1000 to 0x11FF	16 words	Port Name
0x1200 to 0x121F	1 word	Administrative Status 0x0000: disable 0x0001: enable
0x1220 to 0x123F	1 word	Operating Status 0x0000: disable 0x0001: enable 0xFFFF: unavailable
0x1240 to 0x125F	1 word	Duplex 0x0000: half 0x0001: full 0x0003: auto (half) 0x0004: auto (full) 0x0005: auto 0xFFFF: unavailable
0x1260 to 0x127F	1 word	Speed 0x0001: 10 0x0002: 100 0x0003: 1000 0x0004: 2500 0x0005: 10000 0x0101: auto 10 0x0102: auto 100 0x0103: auto 1000 0x0104: auto 2500 0x0105: auto 10000 0x0100: auto 0xFFFF: unavailable
0x1280 to 0x129F	1 word	Flow Control 0x0000: off

		0x0001: on 0xFFFF: unavailable
0x12A0 to 0x12BF	1 word	Default Port VLAN ID 0x0001-0xFFFF
0x12C0 to 0x12DF	1 word	Ingress Filtering 0x0000: disable 0x0001: enable
0x12E0 to 0x12FF	1 word	Acceptable Frame Type 0x0000: all 0x0001: tagged frame only
0x1300 to 0x131F	1 word	Port Security 0x0000: disable 0x0001: enable
0x1320 to 0x133F	1 word	Auto Negotiation 0x0000: disable 0x0001: enable 0xFFFF: unavailable
0x1340 to 0x135F	1 word	Loopback Mode 0x0000: none 0x0001: MAC 0x0002: PHY 0xFFFF: unavailable
0x1360 to 0x137F	1 word	STP Status 0x0000: disabled 0x0001: blocking 0x0002: listening 0x0003: learning 0x0004: forwarding
0x1380 to 0x139F	1 word	Default CoS Value for untagged packets
0x13A0 to 0x13BF	1 word	MDIX 0x0000: disable 0x0001: enable 0x0002: auto 0xFFFF: unavailable
0x13C0 to 0x13DF	1 word	Medium mode 0x0000: copper 0x0001: fiber

		0x0002: none 0xFFFF: unavailable
0x13E0 to 0x14FF	288 words	Reserved address space
SFP Information (32 Ports)		
0x1500 to 0x151F	1 word	SFP Type
0x1520 to 0x153F	1 words	Wave length
0x1540 to 0x157F	2 words	Distance
0x1580 to 0x167F	8 words	Vender
0x1680 to 0x17FF	384 words	Reserved address space
SFP DDM Information (32 Ports)		
0x1800 to 0x181F	1 words	Temperature Raw data
0x1820 to 0x185F	2 words	Alarm Temperature Word 0 : Raw data of High Alarm Word 1 : Raw data of Low Alarm
0x1860 to 0x187F	1 words	Tx power Raw data
0x1880 to 0x18BF	2 words	Warning Tx power Word 0 : Raw data of High Alarm Word 1 : Raw data of Low Alarm
0x18C0 to 0x18DF	1 words	Rx power Raw data
0x18E0 to 0x191F	2 words	Warning Rx power Word 0 : Raw data of High Alarm Word 1 : Raw data of Low Alarm
0x1920 to 0x1FFF	1760 words	Reserved address space
Inbound packet information		
0x2000 to 0x203F	2 words	Good Octets
0x2040 to 0x207F	2 words	Bad Octets

0x2080 to 0x20BF	2 words	Unicast
0x20C0 to 0x20FF	2 words	Broadcast
0x2100 to 0x213F	2 words	Multicast
0x2140 to 0x217F	2 words	Pause
0x2180 to 0x21BF	2 words	Undersize
0x21C0 to 0x21FF	2 words	Fragments
0x2200 to 0x223F	2 words	Oversize
0x2240 to 0x227F	2 words	Jabbers
0x2280 to 0x22BF	2 words	Discards
0x22C0 to 0x22FF	2 words	Filtered frames
0x2300 to 0x233F	2 words	RxError
0x2340 to 0x237F	2 words	FCSError
0x2380 to 0x23BF	2 words	Collisions
0x23C0 to 0x23FF	2 words	Dropped Frames
0x2400 to 0x243F	2 words	Last Activated SysUpTime
0x2440 to 0x24FF	191 words	Reserved address space
Outbound packet information		
0x2500 to 0x253F	2 words	Good Octets
0x2540 to 0x257F	2 words	Unicast
0x2580 to	2 words	Broadcast

0x25BF		
0x25C0 to 0x25FF	2 words	Multicast
0x2600 to 0x263F	2 words	Pause
0x2640 to 0x267F	2 words	Deferred
0x2680 to 0x26BF	2 words	Collisions
0x26C0 to 0x26FF	2 words	SingleCollision
0x2700 to 0x273F	2 words	MultipleCollision
0x2740 to 0x277F	2 words	ExcessiveCollision
0x2780 to 0x27BF	2 words	LateCollision
0x27C0 to 0x27FF	2 words	Filtered
0x2800 to 0x283F	2 words	FCSError
0x2840 to 0x29FF	447 words	Reserved address space
Number of frames received and transmitted with a length(in octets)		
0x2A00 to 0x2A3F	2 words	64
0x2A40 to 0x2A7F	2 words	65 to 127
0x2A80 to 0x2ABF	2 words	128 to 255
0x2AC0 to 0x2AFF	2 words	256 to 511
0x2B00 to 0x2B3F	2 words	512 to 1023
0x2B40 to 0x2B7F	2 words	1024 to maximum size

3. Modbus TCP Commands


There is no Web UI for Modbus TCP configuration. The Modbus TCP configuration can be changed through CLI only.

Modbus TCP	
Number of the Modbus/TCP Master	Switch(config)# modbus idle-timeout Max interval between requests master Modbus TCP Master port Listening Port Switch(config)# modbus master <1-20> Max Modbus TCP Master
Modbus/TCP idle time	Switch(config)# modbus idle-timeout <200-10000> Timeout vlaue: 200-10000ms
Modbus/TCP port number	Switch(config)# modbus port <1-65535> Port Number

4. Modbus TCP Device Photos

To integrate Korenix product with SCADA system, Korenix has provided the photos of the supported devices. You can download it from Korenix web site well.

Example figure of 4508.

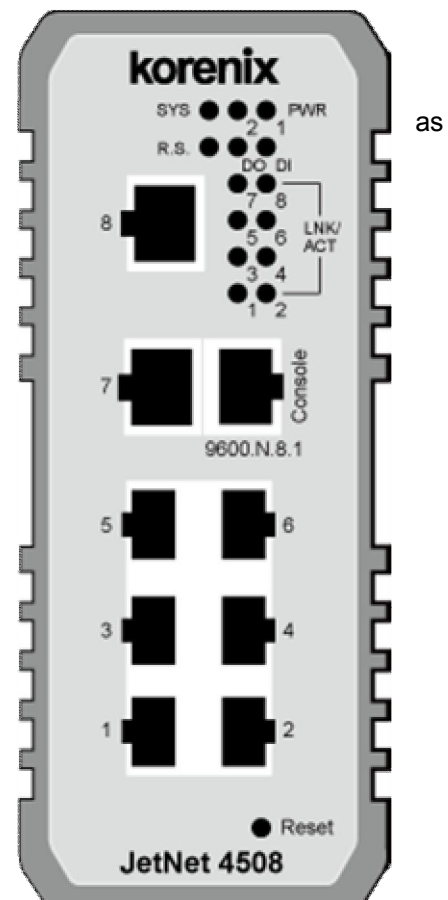

as

Appendix 1 - Revision History

Edition	Date	Modifications
V1.0	Nov. 15, 2011	The first release Modbus TCP Manual.

The Supported Models and Firmware Version – Nov. 15, 2011				
Model	Version		Model	Version
JetNet 4508	V1.1		JetNet 5012G	V1.3
JetNet 4508f	V1.1		JetNet 5018G	V1.3
JetNet 4510	V2.5		JetNet 5628G	V1.2
JetNet 5010G	V2.5		JetNet 5828G	V1.0

Appendix 2 - About Korenix

Less Time At Work! Fewer Budget on applications!

The Korenix business idea is to let you spend less time at work and fewer budget on your applications. Do you really want to go through all the troubles but still end up with low quality products and lousy services? Definitely not! This is why you need Korenix. Korenix offers complete product selection that fulfills all your needs for applications. We provide easier, faster, tailor-made services, and more reliable solutions. In Korenix, there is no need to compromise. Korenix takes care of everything for you!

Fusion of Outstandings

You can end your searching here. Korenix Technology is your one-stop supply center for industrial communications and networking products. Korenix Technology is established by a group of professionals with more than 10 year experience in the arenas of industrial control, data communications and industrial networking applications. Korenix Technology is well-positioned to fulfill your needs and demands by providing a great variety of tailor-made products and services. Korenix's industrial-grade products also come with quality services. No more searching, and no more worries. Korenix Technology stands by you all the way through.

Core Strength---Competitive Price and Quality

With our work experience and in-depth know-how of industrial communications and networking, Korenix Technology is able to combine Asia's research / development ability with competitive production cost and with quality service and support.

Global Sales Strategy

Korenix's global sales strategy focuses on establishing and developing trustworthy relationships with value added distributors and channel partners, and assisting OEM distributors to promote their own brands. Korenix supplies products to match local market requirements of design, quality, sales, marketing and customer services, allowing Korenix and distributors to create and enjoy profits together.

Quality Services

KoreCARE--- KoreCARE is Korenix Technology's global service center, where our professional staffs are ready to solve your problems at any time and in real-time. All of Korenix's products have passed ISO-9000/EMI/CE/FCC/UL certifications, fully satisfying your demands for product quality under critical industrial environments. Korenix global service center's e-mail is koreCARE@korenix.com

5 Years Warranty

Each of Korenix's product line is designed, produced, and tested with high industrial standard. Korenix warrants that the Product(s) shall be free from defects in materials and workmanship for a period of five (5) years from the date of delivery provided that the Product was properly installed and used. This warranty is voided if defects, malfunctions or failures of the warranted Product are caused by damage resulting from force measure (such as floods, fire, etc.), environmental and atmospheric disturbances, other external forces such as power line disturbances, host computer malfunction, plugging the board in under power, or incorrect cabling; or the warranted Product is misused, abused, or operated, altered and repaired in an unauthorized or improper way

Korenix Technologies Co., Ltd.

Business service : sales@korenix.com

Customer service: koreCARE@korenix.com